


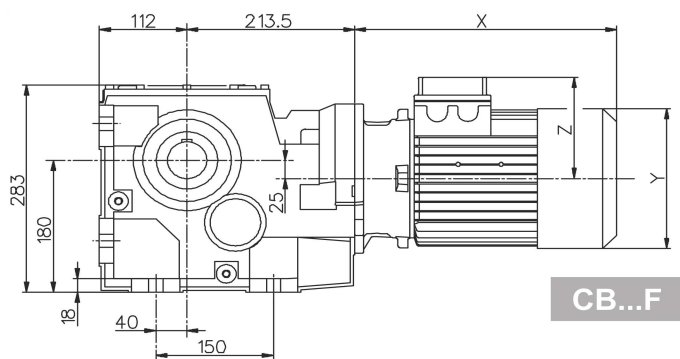

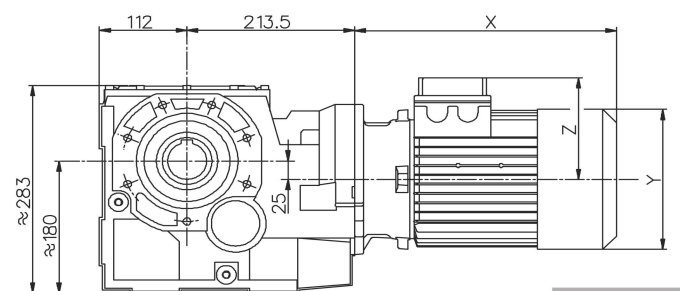


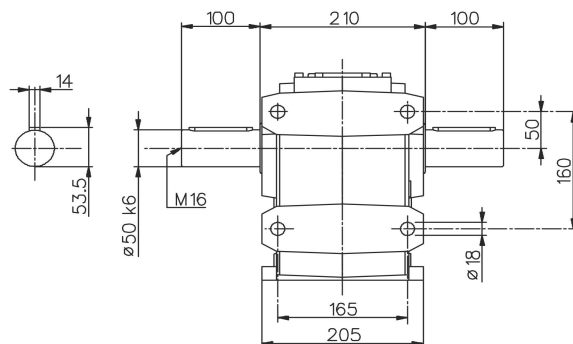

CB...F

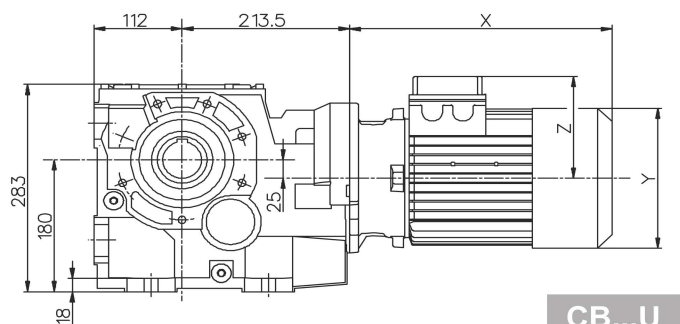

CB...S

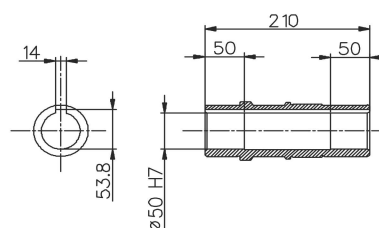

CB...U

103	IB	PAM		Motore normale / Standard motor / Normaler Motor / Moteur normal / Motor normal			Motore autofrenante / Brake motor / Bremsmotor Moteur frein / Motor-freno				
	~Kg	A	~Kg	X	Y	Z	~Kg	X	Y	Z	~Kg
80	58,8	70	54,8	248	158	122	61,4	321	158	137	64,8
90s		70	54,8	276	173	130	63,8	353	173	130	69,3
90l		70	54,8	301	173	130	65,3	378	173	130	70,8
100		85	56,8	335	191	139	70,4	417	191	139	75,8
112		85	56,8	356	211	154	81,8	453	211	154	91,5
132s		110	59,5	396	249	194	95,8	495	249	194	106,1
132m		110	59,5	443	249	194	107,4	547	249	194	122,1
160s		158	66,2	522	310	244	-	-	-	-	-
160l		158	66,2	566	310	244	-	-	-	-	-

Per le dimensioni relative alla zona attacco motore (Pm, Dm, bm, tm) fare riferimento alla tabella di pag. 190.

For the dimensions concerning the motor connection area (Pm, Dm, bm, tm) please refer to the table shown at page 190.

Zu den Abmessungen des Motoranschlußflansches (Pm, Dm, bm, tm) siehe Tabelle auf Seite 190.

Pour les dimensions concernant la zone de montage du moteur (Pm, Dm, bm, tm) lire SVP le tableau à la page 190.

Para las magnitudes correspondientes a la zona del motor (Pm, Dm, bm, tm) consulte la tabla de la página 190.

